

03—330 Removal and installation of radial ball bearing and closing ring in crankshaft

Special tools

Countersupport for internal puller



000 589 33 33 00


Internal puller 14.5–18.5 mm



000 589 25 33 00

Removal

1 Pull ball bearing and closing ring out of crankshaft together with countersupport and internal puller.

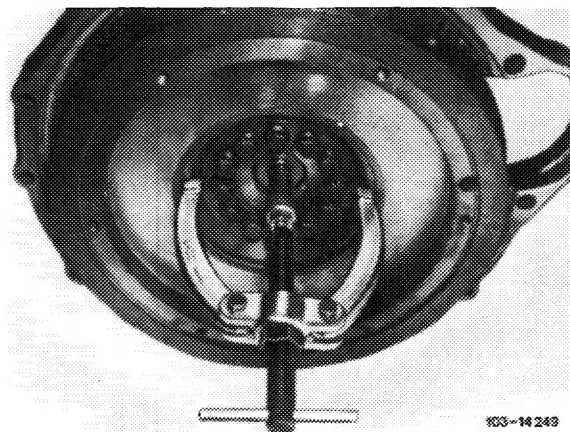

Installation

- 2 Provide new ball bearing (1) with anti-friction bearing grease and knock into crankshaft with a suitable mandrel.
- 3 Knock-in closing ring (2).

